



Rope Runner Classic

INSPECTION NOTICE

05/09/2017

Before using the Singing Tree Rope Runner, complete all inspections described in the user's manual. The Rope Runner user's manual is available online at www.treestuff.com/manuals.

All Rope Runner users are encouraged to inspect the edges of each side plate for wear, dents, or burrs before every use as noted in the manual, especially on the bottom corners of the Bird Assembly. Through repeated use, it is possible for a burr to develop on the bottom of the Bird (**FIG. 1**) from contact between the Bird Assembly and the Lever Assembly (**FIG. 2**).

If a burr develops, it can cause added friction between the Bird Assembly and the Tether Assembly (**FIG. 3**) in exceptional circumstances. In extreme cases, it could possibly restrict the spring action of the Bird Assembly, reducing the effectiveness of the device.

If your device has a burr (**FIG. 1**) and there is increased friction against the Tether Assembly (**FIG. 2**), use emery cloth or sandpaper to remove the burr or, in extreme cases, replace the Bird Assembly.

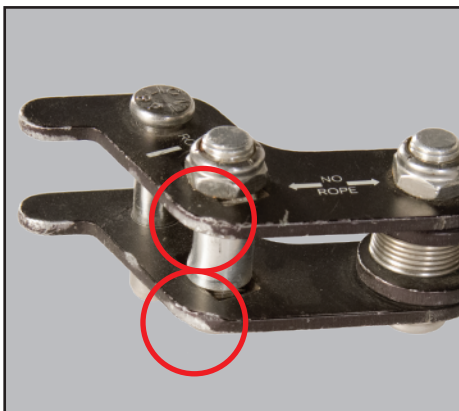


FIG. 1



FIG. 2



FIG. 3

Note: The Rope Runner shown in Figures 1-3 is heavily worn and was intentionally damaged to produce this issue for demonstration purposes.